



MANUFACTURE

VegaForce[®]Company

VegaForce[®] Company holds the worldwide exclusive BCM[®] trademark and exterior design copy license for use with BCMAIR[®] product, granted by Bravo Company manufacturing, inc.

Address: 8F., No. 609, Sec. 1, Wanshou Rd.,
Guishan Dist., Taoyuan City 333, Taiwan
Phone: +886-2-8200-6630
Fax: +886-2-8200-6610
E-Mail: service@vegaforce.com.tw
Website: <https://www.vegaforce.com/>

BCMAIR[®]
AIRSOFT PRODUCTS

 
BCMAIR[®]

AIRSOFT PRODUCTS

BCMCMR

6mm Gas Blowback Rifle

INSTRUCTION MANUAL

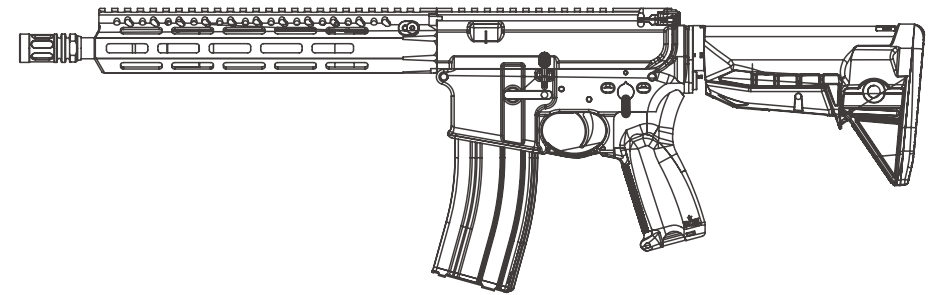

⚠ WARNING: ADULT SUPERVISION IS REQUIRED. MISUSE MAY CAUSE SERIOUS INJURY, ESPECIALLY TO THE EYE. EYE PROTECTION DESIGNED FOR AIRSOFT GUNS MUST BE WORN BY THE USER AND ANY PERSON WITHIN RANGE. READ OWNER'S MANUAL BEFORE USING. MAY BE DANGEROUS UP TO 200METERS.
未成年使用時需有成人監督。錯誤操作可能造成嚴重傷害，特別是眼睛。使用者與周遭的人務必配戴護目鏡。使用請保持安全距離(最高200米)。使用前請詳閱操作說明書，避免發生危險。

Manufactured by VegaForceCompany 100% Made in Taiwan

SAFE GUN HANDLING

You should be fully familiar with the proper and safe handling with your Airsoft gun. The basic principles of gun safety require you to always apply the following rules when handling an Airsoft gun.

您必須完全了解玩具槍正確的操作以及安全守則。

為了您使用上的安全，你必須遵循以下的各項規則。

Always wear eye protective gear.

始終配戴護目鏡

You may be punished if you are shooting for practical jokes.

若隨意用玩具槍開玩笑可能會觸及法律

Never shoot the gun at places where people and cars pass cross.

切勿在有人及汽車經過的地方開槍

Never aim or shoot a person or animal as a target.

切勿將人或動物做為目標射擊

Never look into the gun muzzle.

切勿直視槍口

Always direct the muzzle towards a safe direction.

始終將槍口朝向安全位置

Avoid pulling the trigger carelessly.

避免不小心拉動扳機

Please keep your fingers away from the trigger, except when you are ready to shoot a target.

除準備射擊目標外，請不要將手指放在扳機上

Always put the gun in a case or bag when you are carrying it.

攜帶槍枝時請將其放在箱子或袋子中

Keep out of reach of children.

請將本品放在兒童無法觸及的地方

DO NOT ATTEMPT TO DISASSEMBLE OR TAMPER WITH YOUR AIRSOFT GUN. CONTACT CUSTOMER SERVICE AT VFC FOR REPAIR.

請勿嘗試拆卸或變造玩具槍。有維修需求時，請聯絡VFC的客戶服務進行維修。

⚠ WARNING: DO NOT BRANDISH OR DISPLAY THIS AIRSOFT GUN IN PUBLIC-IT MAY CONFUSE PEOPLE AND MAY BE A CRIME. POLICE AND OTHERS MAY THINK THIS AIRGUN IS A FIREARM. DO NOT CHANGE THE COLORATION AND MARKINGS TO MAKE IT LOOK MORE LIKE A FIREARM. THIS IS DANGEROUS AND MAY BE A CRIME.

請勿在公共場所揮舞或展示玩具槍，以免造成他人困擾及恐慌，警察與其它民眾可能會認為玩具是真槍，並可能構成犯罪行為。請勿變造玩具槍的外觀與機構，使玩具槍更像真槍，此為非法行為。

⚠ CAUTION:
EYE PROTECTION
REQUIRED
WEAR YOUR
SHOOTING GLASSES

請注意
眼睛的保護
並於射擊時
戴上護目鏡

 


⚠ WARNING: ADULT SUPERVISION IS REQUIRED. MISUSE MAY CAUSE SERIOUS INJURY. ESPECIALLY TO THE EYE. EYE PROTECTION DESIGNED FOR AIRSOFT GUNS MUST BE WORN BY THE USER AND ANY PERSON WITHIN RANGE. READ THUS OWNER'S MANUAL BEFORE USING. MAY BE DANGEROUS UP TO 200METERS.


未成年使用時需有成人監督。錯誤操作可能造成嚴重傷害，特別是眼睛。使用者與周遭的人務必配戴護目鏡。使用請保持安全距離(最高200米)。使用前請詳閱操作說明書，避免發生危險。

-COMPONENTS-


•RIGHT SIDE

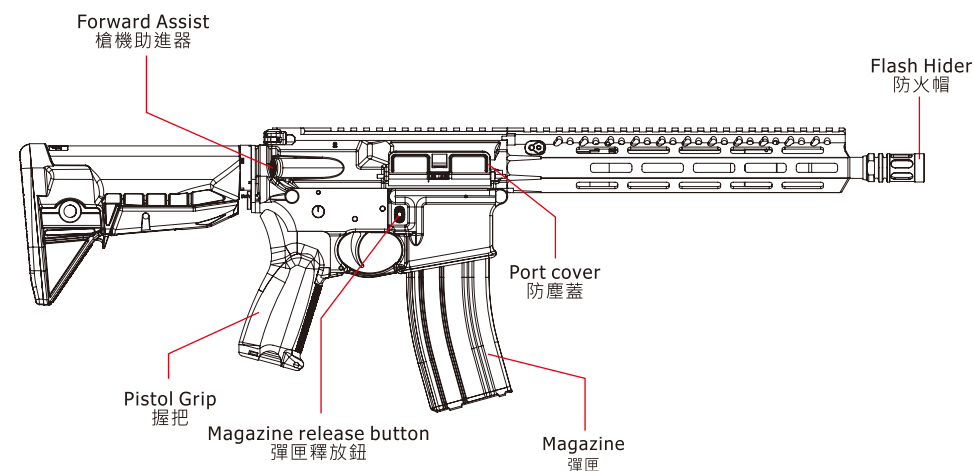

•LEFT SIDE

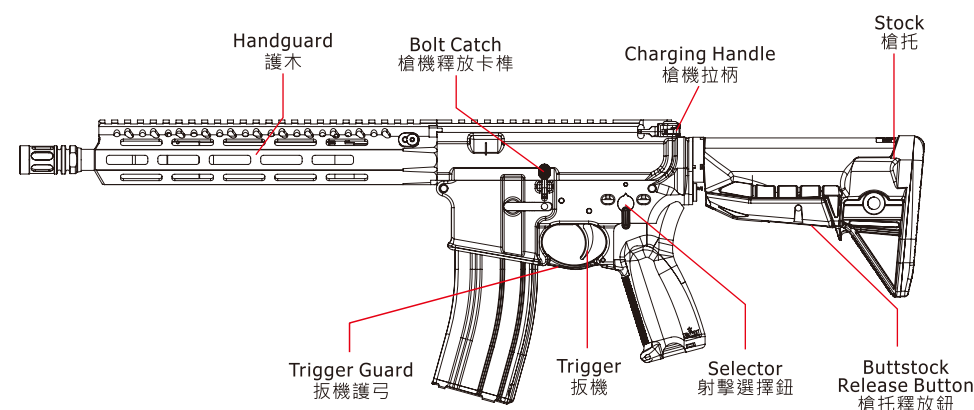 

-SAFETY SETTING-

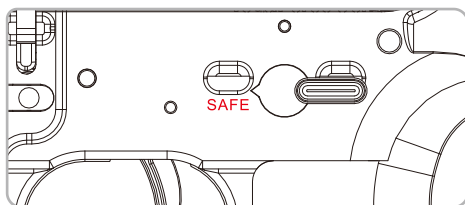 


Safety Setting 保險位置 (The trigger can not be pulled)

無法扣動扳機

Always set lever to SAFE position when gun is not in use.

 
在未使用玩具槍的狀態下，始終將射擊選擇鈕保持在保險位置。

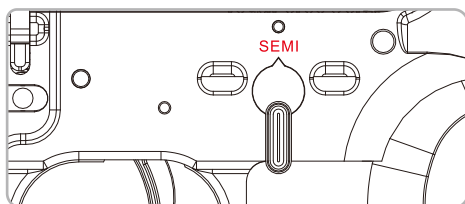

Semi Auto 半自動

Pulled the trigger, the gun will fire one shot each time.

 拉動一次扳機，則發射一發子彈

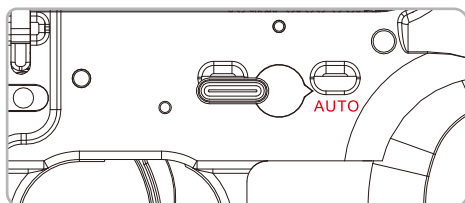

Full Auto 全自動

 
The gun will fire automatically while the trigger remains pulled.

扣著扳機不放將連續發射子彈

WARNING • CAUTION

- Do not operate the selector lever while the trigger is depressed. Damage and malfunction will occur if you attempt to do so.
請勿在扣壓扳機的同時，切換射擊選擇鈕，這樣會造成玩具槍的故障。
- Do not pull the trigger while the selector is on SAFE. Doing so will damage the trigger and safety mechanisms.
當射擊選擇鈕處於保險狀態，請勿去拉動扳機，這樣容易造成扳機與保險裝置的損壞。

-LOADING MAGAZINE-

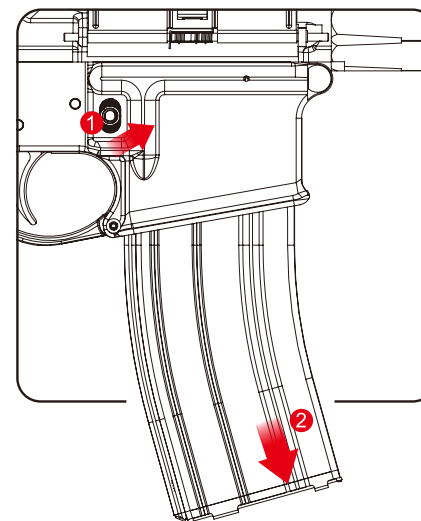

Press the magazine release button to remove the magazine.
按壓彈匣釋放鈕並卸除彈匣



 
Use only 6mm BB with the magazine.
彈匣只能使用 6mm 的 BB 彈

120 RDS MAGAZINE


Push the gas canister nozzle into the Filling gas nozzle. Make sure the canister is in vertical position when charging.

將瓦斯罐接嘴對準並接上彈匣灌氣口，用力壓下開始填充。

並確保彈匣灌氣口與瓦斯罐接嘴的垂直。

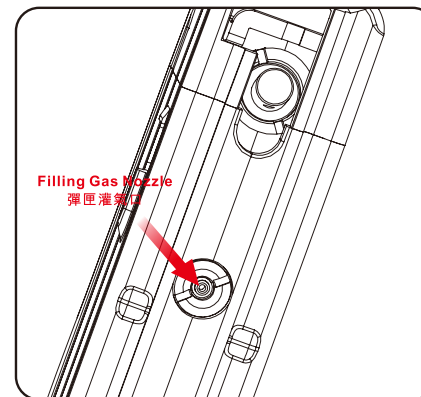


Filling Gas Nozzle
彈匣灌氣口

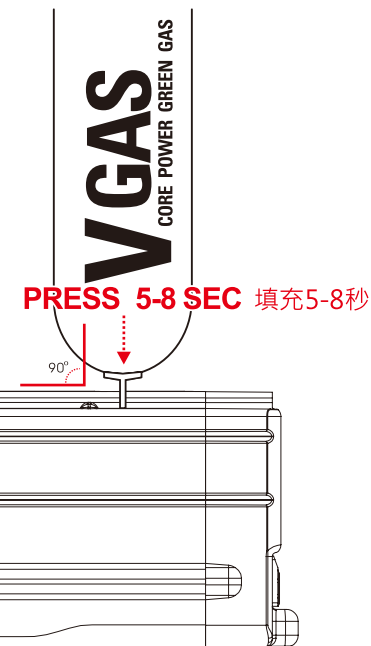 

PRESS 5-8 SEC 填充5-8秒

 -LOADING MAGAZINE-

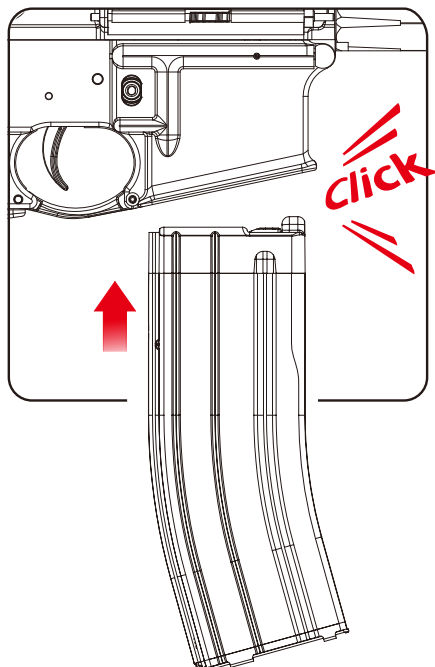

WARNING • CAUTION

- Always use high quality 0.20 gram or heavier BB in your airsoft rifle. 請使用高品質的 0.20 克或是更重的 BB 彈。

We will not be held responsible for any damage or incidents arising from use of poor quality or underweight BB. 對於因使用品質差或重量不足的 BB 彈造成的損壞，本公司概不負責。

 
Make sure to set the magazine upwards and connect it firmly until a click sound is heard. 將彈匣向上推入彈匣井內，確保彈匣插入方向正確。向上插入直到聽到喀噠聲為止。

For the better performance of the GBB rifle. Do not shoot the rifle right after charging the gas. 為了獲得最佳的效能，填充瓦斯完畢請勿立即開槍射擊。


WARNING • CAUTION

- You may experience a delay action if the surrounding temperature drops below 20°C/68°F. Remember, do not expose magazine directly under the sun or incinerate the magazine, it may cause bursting. It is strongly recommended to empty gas from magazine after shooting. Be sure to avoid direct gas contact with Eyes or Skin when gas is being released, it will cause frostbite. 若在環境溫度 20°C/68°F 以下可能瓦斯作用可能會較緩慢，避免將彈匣於陽光底下直射曝曬以及遠離火源，否則可能導致爆炸。強烈建議射擊後將瓦斯從彈匣中釋放，釋放瓦斯時避免直接接觸到眼睛及皮膚以防凍傷。


Please discharge the magazine by press the value gently, for releasing residual gas. 請按下氣閥釋放鈕，釋放彈匣內殘餘的瓦斯

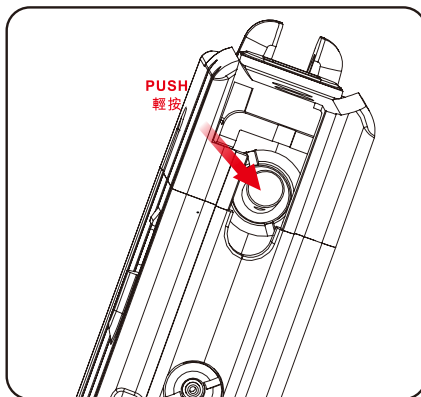

-ADJUSTING THE STOCK-

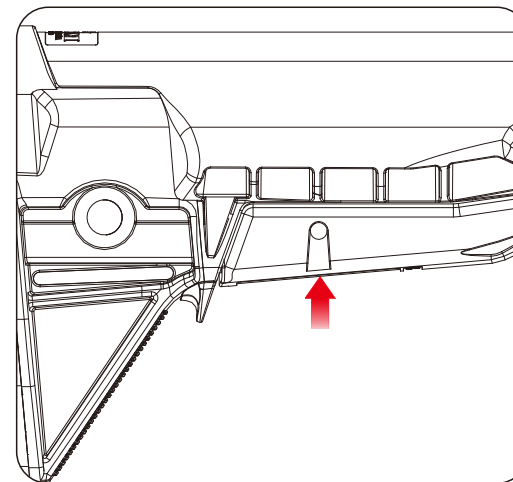 

 Press the stock release button, then adjust the stock position. 按下槍托釋放鈕，調整槍托位置。

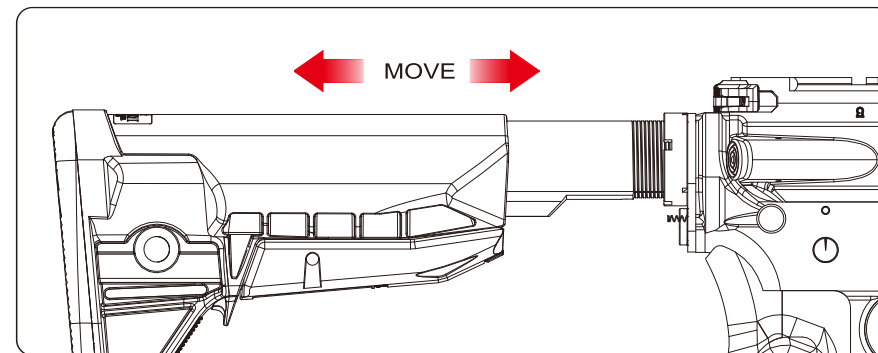

WARNING • CAUTION

- Be careful not to catch your fingers when operating buttstock functions.

 
在調整槍托位置時，請小心不要夾到手指。

-SETTING AND FIRING-

•Insert The Magazine

Push magazine up in to magazine well.
Make sure to set the magazine upwards
and connect it firmly until a **CLICK SOUND**
is heard.



將彈匣向上推入彈匣井內，確保彈匣插入方向正確。
向上插入直到聽到**喀噠聲**為止。

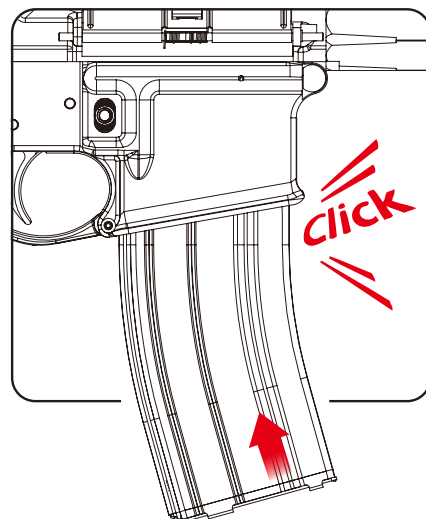

•Check The Chamber


Open bolt and check firing chamber.
Make sure it is clear.

  槍機後定，確認槍膛內暢通無異物。

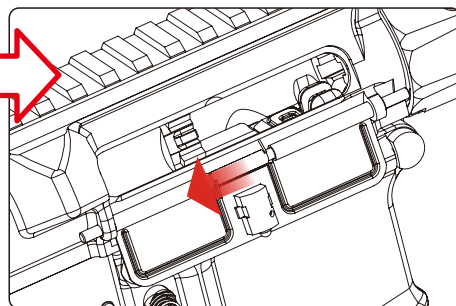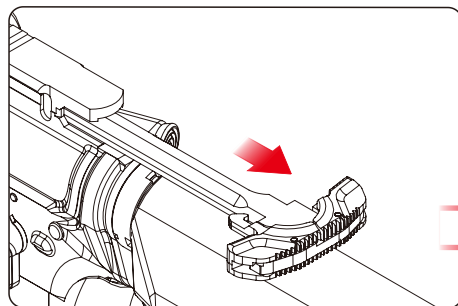


•Return The Charging Handle

 Press the charging handle forward and lock it into position.
推動槍機拉柄復位。

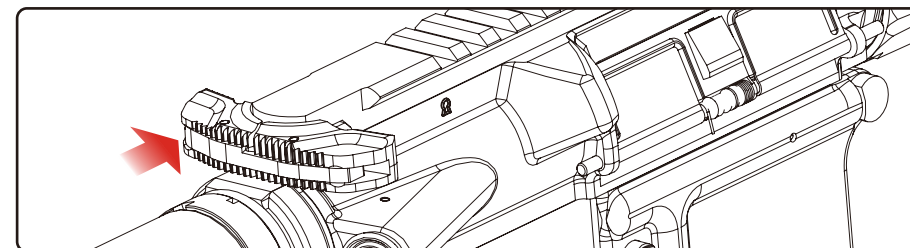


•Firing Mode Select

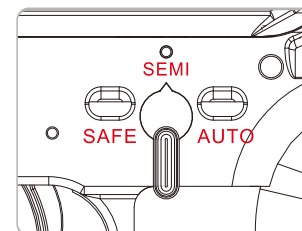 

WARNING • CAUTION

 - Confirm selector is off SAFE before firing the gun.
確認射擊選擇鈕已經關閉保險後開始射擊。
- Pulling the trigger while the selector is on SAFE
will damage the gun and cause it to malfunction.
當射擊選擇鈕切換為保險狀態時，扣壓扳機有可能
導致故障。

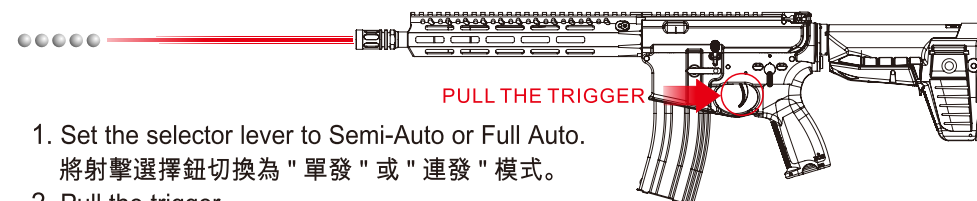

1. Set the selector lever to Semi-Auto or Full Auto.
將射擊選擇鈕切換為 " 單發 " 或 " 連發 " 模式。
2. Pull the trigger.
扣壓扳機，開始射擊。

CAUTION

Never put your finger on the trigger unless you are ready to shoot.
除準備射擊目標外，請不要將手指放在扳機上。

-SETTING AND FIRING-

 
•Release Bolt

Press the Button release Bolt to Chamber.
按壓槍機釋放鈕釋放槍機，使槍機復位。


Pinch Point Warning

Keep fingers out of bolt
area when releasing bolt
catch.

釋放槍機時，
請勿將手指放在槍機位置，
以免夾到手指。

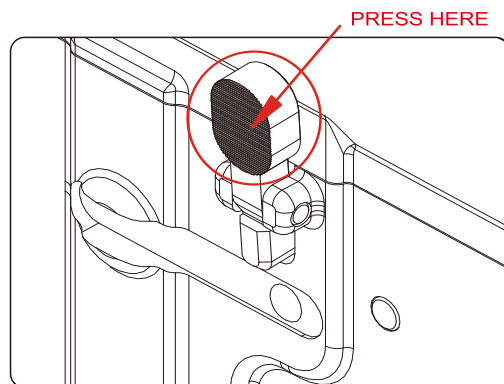

-VARIABLE HOP-UP SYSTEM-

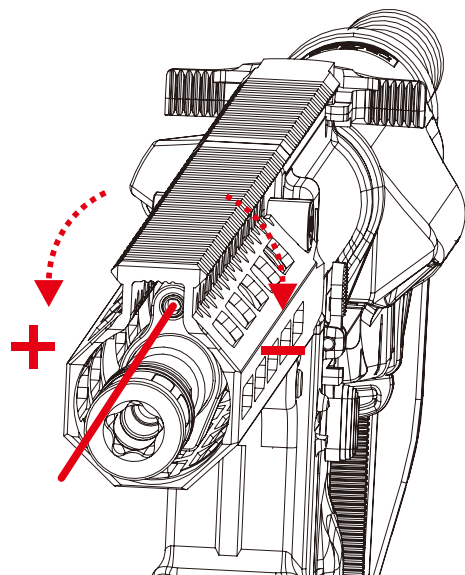 

This HOP-UP system is adjusted by 3mm hex wrench.
使用3mm六角扳手調整HOP-UP系統。

GuideHOP

 
Save time, Convenient and Fast

The BCM MCMR Series GBBR uses our new patented "GuideHOP" HOP-UP adjust system. There is no need to disassemble the handguard or upper and lower receiver when you need adjust your HOP-UP. All you only need a 3mm hex wrench to adjust HOP-UP at gas block. You can adjust HOP-UP in anytime, anywhere, quickly and easily, without any disassembly.

省時、方便、快速

BCM MCMR 系列瓦斯槍採用VFC最新專利的"GuideHOP" 彈道調整設計。無需分解槍支，只需要使用3mm六角扳手即可在瓦斯鋼管座處進行彈道調整。您可以隨時隨地、快速方便的調整，無需任何拆解，大大減少因拆解所造成的不便與毀損。


- The best position is where the bullets fly horizontally and the longest flying distance is obtained.
最佳彈道為BB彈水平飛行並獲得最長飛行距離。

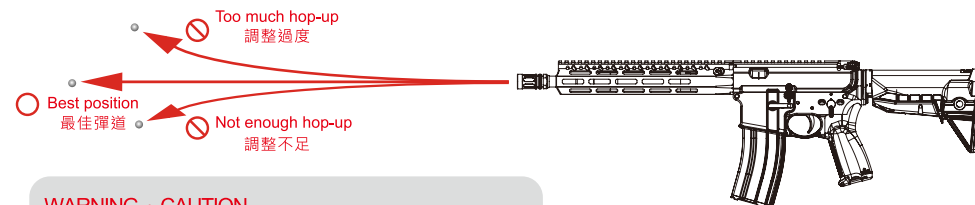

WARNING • CAUTION


- Never hold the gun sideways as BB bullets will curve right or left. This is due to the HOP UP system. The Best setting is, where bullets fly horizontally. 請勿翻轉或傾斜射擊你的槍，這會造成射出的彈道偏左或偏右，對於 HOP UP 系統設計，水平持握射擊是最好的射擊方式。

 -FIELD STRIPING-

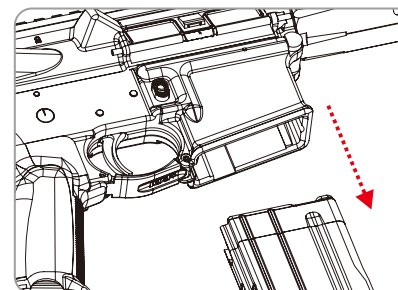


1.Remove the Magazine / 卸除彈匣

 Press Magazine catch button and remove the Magazine.
按下彈匣釋放鈕將彈匣卸下。

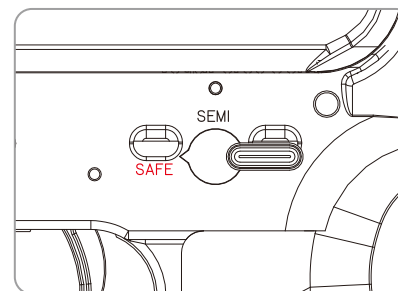


3.Safety setting / 保險設置

 Place safety selector lever on safe.
將射擊選擇鈕轉至保險位置。

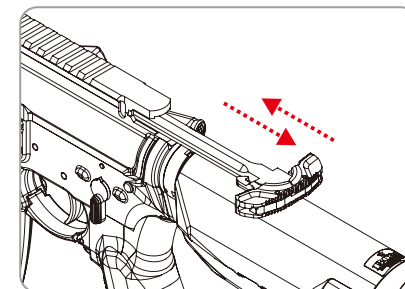


2.Cocking the Hammer / 擊錘復位

 Pull the Charging handle rearward, Cocked the Hammer, Return Charging handle to forward.
拉動槍機拉柄將擊錘復位。

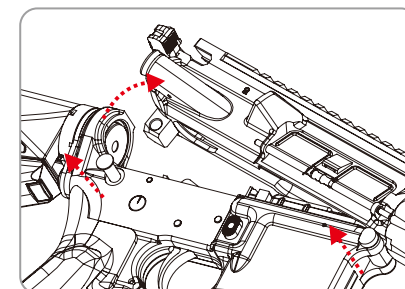


4.Pull Up the Take Down Pin and Pivot Pin / 拉出上下槍身結合插梢

 - Push in Take down pin as far as it will go. Pivot Upper receiver from lower receiver.
- Push in pivot pin. Separate Upper and lower receiver.
- 推出槍身後結合插梢，將上槍身從下槍身打開。
- 推出槍身前結合插梢，完整分開上下槍身。

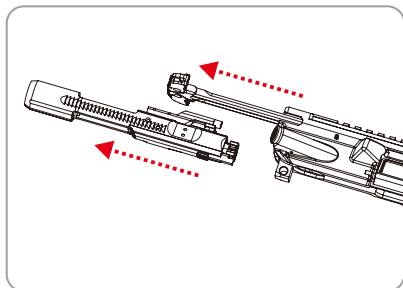




5.Remove the Bolt Assembly/卸除槍機組件

 Pull back the charging handle.Take down the bolt carrier and bolt.
向後拉出槍機拉柄，並取出槍機。

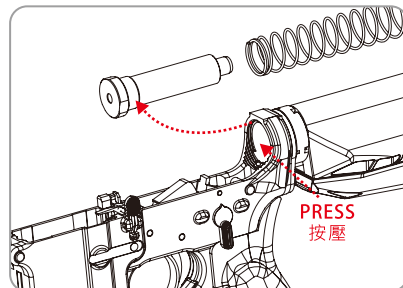


6.Remove the Buffer Assembly/卸除緩衝機組件

   - Press the Buffer stop pin,
- Pull out the Action Spring and Buffer.
- 按下緩衝機固定銷，
- 拉出覆進簧與緩衝機。

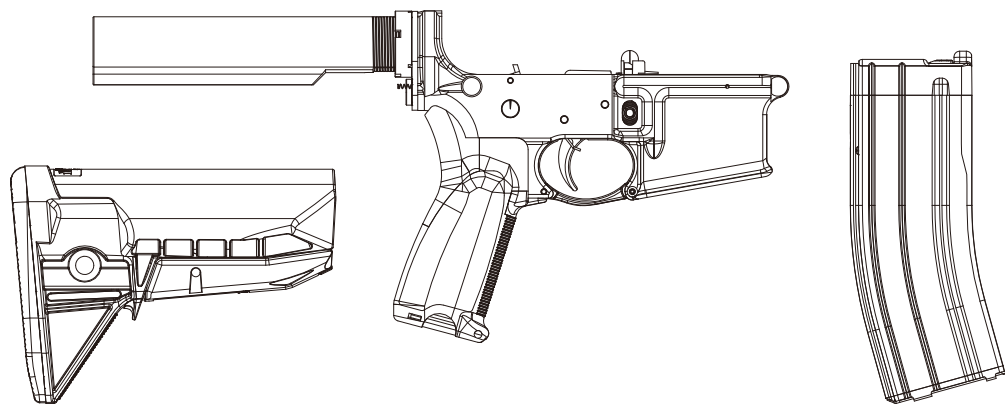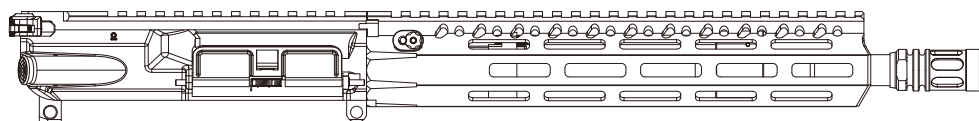


-MAINTENANCE-

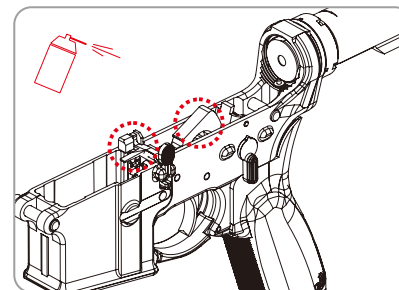 


a. Lower Receiver / 下槍身

 Lightly lubricate all moving parts inside the lower receiver.
些微潤滑下槍身內的可動部件。

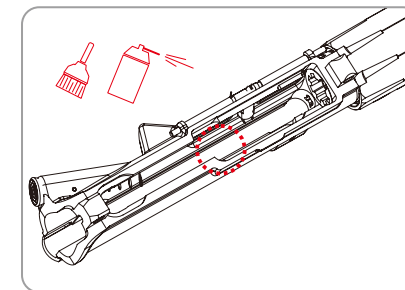


b. Upper Receiver / 上槍身

 Clean all areas and out of fouling, Metal debris and dirt.
清潔所有區域並清除污垢與金屬碎屑。

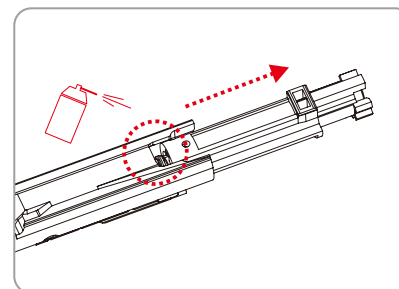


c. Bolt Assembly / 槍機組件

 Use silicone oil lightly lubricate all contact area.
使用矽油將所有可接觸區域做些微潤滑。

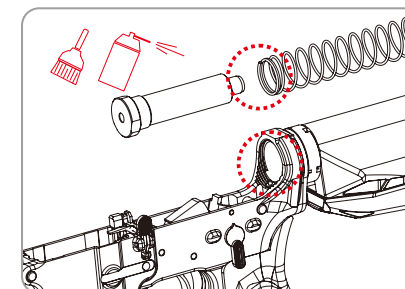


d. Buffer Assembly / 緩衝機組件

 Clean all areas and use silicone oil lightly lubricate all contact area.
清潔並使用矽油將所有可接觸區域做些微潤滑。

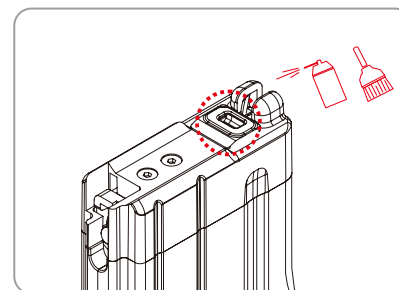

e. Magazine / 彈匣

 Clean all areas and out of fouling, Metal debris and dirt.
清潔所有區域並清除污垢與金屬碎屑。

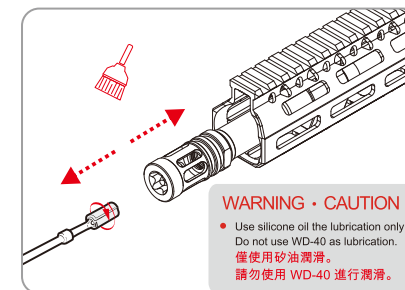

WARNING • CAUTION

- Use silicone oil the lubrication only.
Do not use WD-40 as lubrication.
僅使用矽油潤滑。
請勿使用 WD-40 進行潤滑。

f. Inner Barrel / 槍支內管

Use patch holder to clean the inner barrel.
使用通槍條清潔槍支內管。

-TROUBLESHOOTING CLINIC-

Symptom / 徵狀	Cause / 原因	Action / 解決方式
No operation at all. 操作沒有反應	<ol style="list-style-type: none"> 1. No Gas in Magazine. 彈匣內沒有瓦斯。 2. Selector lever on safe. 射擊選擇鈕在保險位置。 3. Not loaded. 未上膛。 4. The Magazine is in low temperature. 彈匣溫度過低。 5. The pressure inside the Magazine is too high. 彈匣內壓力過高。 	<ol style="list-style-type: none"> 1. Unload the Magazine and filling the Gas. 卸下彈匣並填充瓦斯。 2. Turn the selector lever on semi/full auto sites. 將射擊選擇鈕轉至半自動/全自動射擊模式。 3. Pull the Charging handle, loading the rifle. 拉動槍機拉柄，使步槍上膛。 4. After running fire, the Magazine will be in low temperature. Please, unload the Magazine until the Magazine temperature rise to normal. 射擊後，彈匣將處於低溫狀態。請卸下彈匣，靜待彈匣恢復常溫。 5. Do not use Gas which pressure is surpassed 12 Kg/cm. 請勿使用壓力高於12 Kg/cm 的瓦斯。
Magazine leak. 彈匣漏氣	<ol style="list-style-type: none"> 1. O ring aged. O環老化。 2. O ring broken. O環斷裂。 3. Charging valve broken. 彈匣灌氣口損壞。 	<ol style="list-style-type: none"> 1.2.3. Purchase the replacement part at your dealer or from VFC. 向經銷商或VFC購買替換零件。
The recoil force decreases. 後座力變小	<ol style="list-style-type: none"> 1. The Magazine is in low temperature. 彈匣溫度過低。 2. The gas pressure is insufficient. 瓦斯氣體壓力不足。 3. Lubrication insufficiency. 潤滑不足。 4. Bolt O ring broken. 槍機O環破損。 	<ol style="list-style-type: none"> 1. After continuous firing, the Magazine will be in low temperature. Please, unload the Magazine until the Magazine temperature rise to normal. 射擊後，彈匣將處於低溫狀態。請卸下彈匣，靜待彈匣恢復常溫。 2. Unload the Magazine and refill the gas. 卸下彈匣並重新填充瓦斯。 3. The moving part needs lubrication. 可動部件需要潤滑保養。 4. Purchase the replacement part at your dealer or from VFC. 向經銷商或VFC購買替換零件。
The trajectory is not steady. 彈道不穩定	<ol style="list-style-type: none"> 1. Too much hop setting. hop旋鈕調整過度。 2. Inner Barrel or Hop parking contaminated by oil or dirt. 槍支內管或HOP橡皮內有灰塵或油污。 3. Worn or damaged hop parking. HOP橡皮磨損或毀壞。 4. Improper or too large size BB bullets. 使用不合適或太大的BB彈。 	<ol style="list-style-type: none"> 1. Gradually return adjustment lever towards normal. 漸趨調節使彈道平穩正常。 2. Clean the oil or dirt. 清潔灰塵或油污。 3. Purchase the replacement part at your dealer or from VFC. 向經銷商或VFC購買替換零件。 4. Use the quality BBs. 使用優質BB彈。

If you have any other questions, please contact your dealer or email us at

service@vegaforce.com.tw

如果您有其它問題，請向您購買的經銷商聯繫或寄電子郵件至

我們公司信箱service@vegaforce.com.tw

V GAS
CORE POWER
PURITY
QUALITY
POWERFUL



High Quality Green Gas

For Your Gas Rifle And Pistol

100% Made in Taiwan

