

SAFE GUN HANDLING

You should be fully familiar with the proper and safe handling with your Airsoft gun. The basic principles of gun safety require you to always apply the following rules when handling an Airsoft gun.

Never point at anything you do not intend to shoot.

Always treat the Airsoft gun as though it is loaded and with the same respect the Airsoft gun as the real firearm.

Always aim in a SAFE DIRECTION. Keep the muzzle pointed in a SAFE DIRECTION.

Always keep the selector lever on SAFE until ready to shoot.

Always keep your finger away from the trigger and trigger guard until ready to shoot.

When you or others are in the shooting range, please wear the eye protection that designed for Airsoft sport to protect your eyes.

Use 6mm plastic BBs only.

Do not shoot at hard surfaces or the surfaces of water: the plastic BBs may bounce off or ricochet and hit someone or something you do not want to hit.

DO NOT reuse fired plastic BBs because they might be damage your Airsoft gun.

Make sure ALL of the plastic BBs and power source are unload from the Airsoft gun.

Always store this Airsoft gun in a safe place.

Please make sure the gun is unloaded when getting form storage or another person.

DO NOT ATTEMPT TO DISASSEMBLE OR TAMPER WITH YOUR AIRSOFT GUN.

CONTACT CUSTOMER SERVICE AT VFC FOR REPAIR.

⚠ WARNING: DO NOT BRANDISH OR DISPLAY THIS AIRSOFT GUN IN PUBLIC - IT MAY CONFUSE PEOPLE AND MAY BE A CRIME. POLICE AND OTHERS MAY THINK THIS AIRGUN IS A FIREARM. DO NOT CHANGE THE COLORATION AND MARKINGS TO MAKE IT LOOK MORE LIKE A FIREARM. THAT IS DANGEROUS AND MAY BE A CRIME.

⚠ CAUTION:
EYE PROTECTION
REQUIRED
WEAR YOUR
SHOOTING GLASSES




VegaForce Company
www.gb-tech.com.tw

No.68, Jianguo 2nd Rd., Xinzhuang Dist,
New Taipei City 242, Taiwan
Phone: +886-2-2203-6630
Fax: +886-2-2203-6610
e-Mail: service@vegaforce.com.tw

Your Dealer

 Ver. 201609

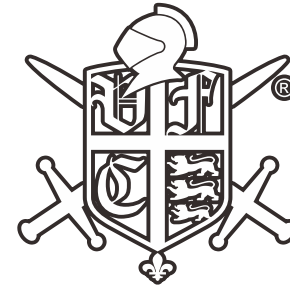


MOD. VR16 / M4 SERIES

Cal. 5.95mm Airsoft Electric Rifle

HANDLING CAUTIONS AND INSTRUCTION MANUAL

 MANUFACTURED BY VEGA FORCE COMPANY MADE IN TAIWAN

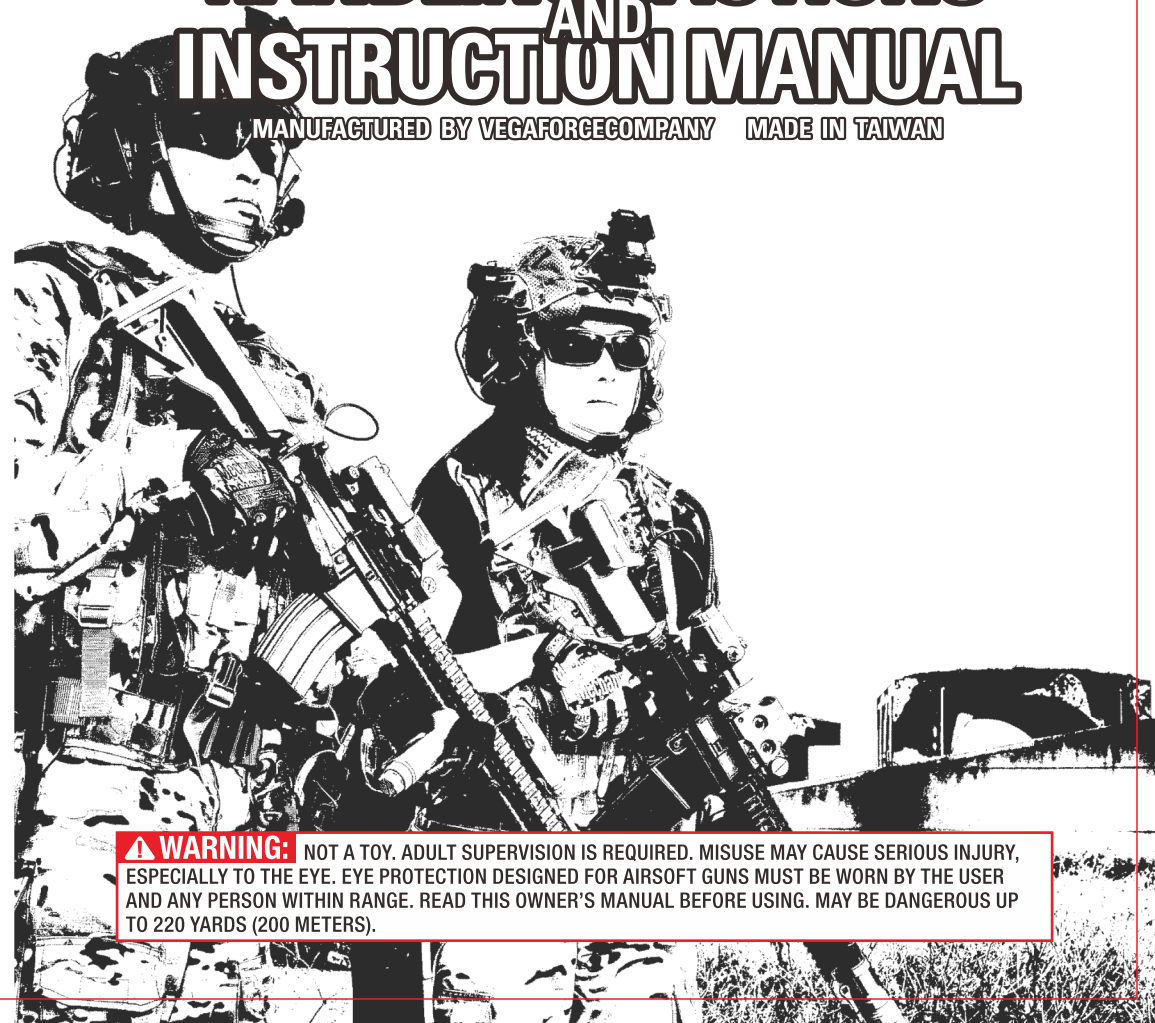

⚠ WARNING: NOT A TOY. ADULT SUPERVISION IS REQUIRED. MISUSE MAY CAUSE SERIOUS INJURY, ESPECIALLY TO THE EYE. EYE PROTECTION DESIGNED FOR AIRSOFT GUNS MUST BE WORN BY THE USER AND ANY PERSON WITHIN RANGE. READ THIS OWNER'S MANUAL BEFORE USING. MAY BE DANGEROUS UP TO 220 YARDS (200 METERS).

HISTORY OF VEGA FORCE COMPANY

Vega Force Company was founded by the people who love guns in 2004. The VFC founders believe that guns are "Works of Art". VFC uses its expertise to produce highly realistic Airsoft replica with custom grade performance of internal mechanical design, which allows VFC users to have better shooting and operating experience. What's more than that is every VFC Airsoft product is in the standard of collection grade with strong and refined surface finishing. "Collectors wanted and operators wanted" is the motto for VFC's products.

 
The reputation VFC earned is not only from the users, but also from distributors and license holders around the world. With OEM experience of more than a decade, VFC's team of professionals specializes in designing and developing quality Airsoft products.

The VR16 series is one of the most unique products in VFC. It is distributed around the world, earned a good reputation and market response. It is combined with high- end technology and excellent quality to achieve and reach the high-end Airsoft AEG range. All the details and designs are amazing. It is simply reaching for the best.

VR16 / M4 Series Features

The VFC SR16 series comes with full metal body, nice surface finishing and high quality VR16 engravings. The Internal of VR16 includes High-performance custom gearbox to let your rifle more powerful, and the MOSFET electronic control unit inside for higher efficiency and faster trigger response. Full of the QRS accessories allow you to adjust the rifle to fits your shooting motion. Dust cover can be flipped open to reveal hop-up adjuster, and VR16 also comes with an ambidextrous fire selector which is lefty friendly.


This series has the most popular rail system with ample room for all sorts of sights and accessories. Just like in real world, this makes things much easier when it comes to stabilizing yourself in each and every shot, same in the Airsoft world, and also for aesthetics.

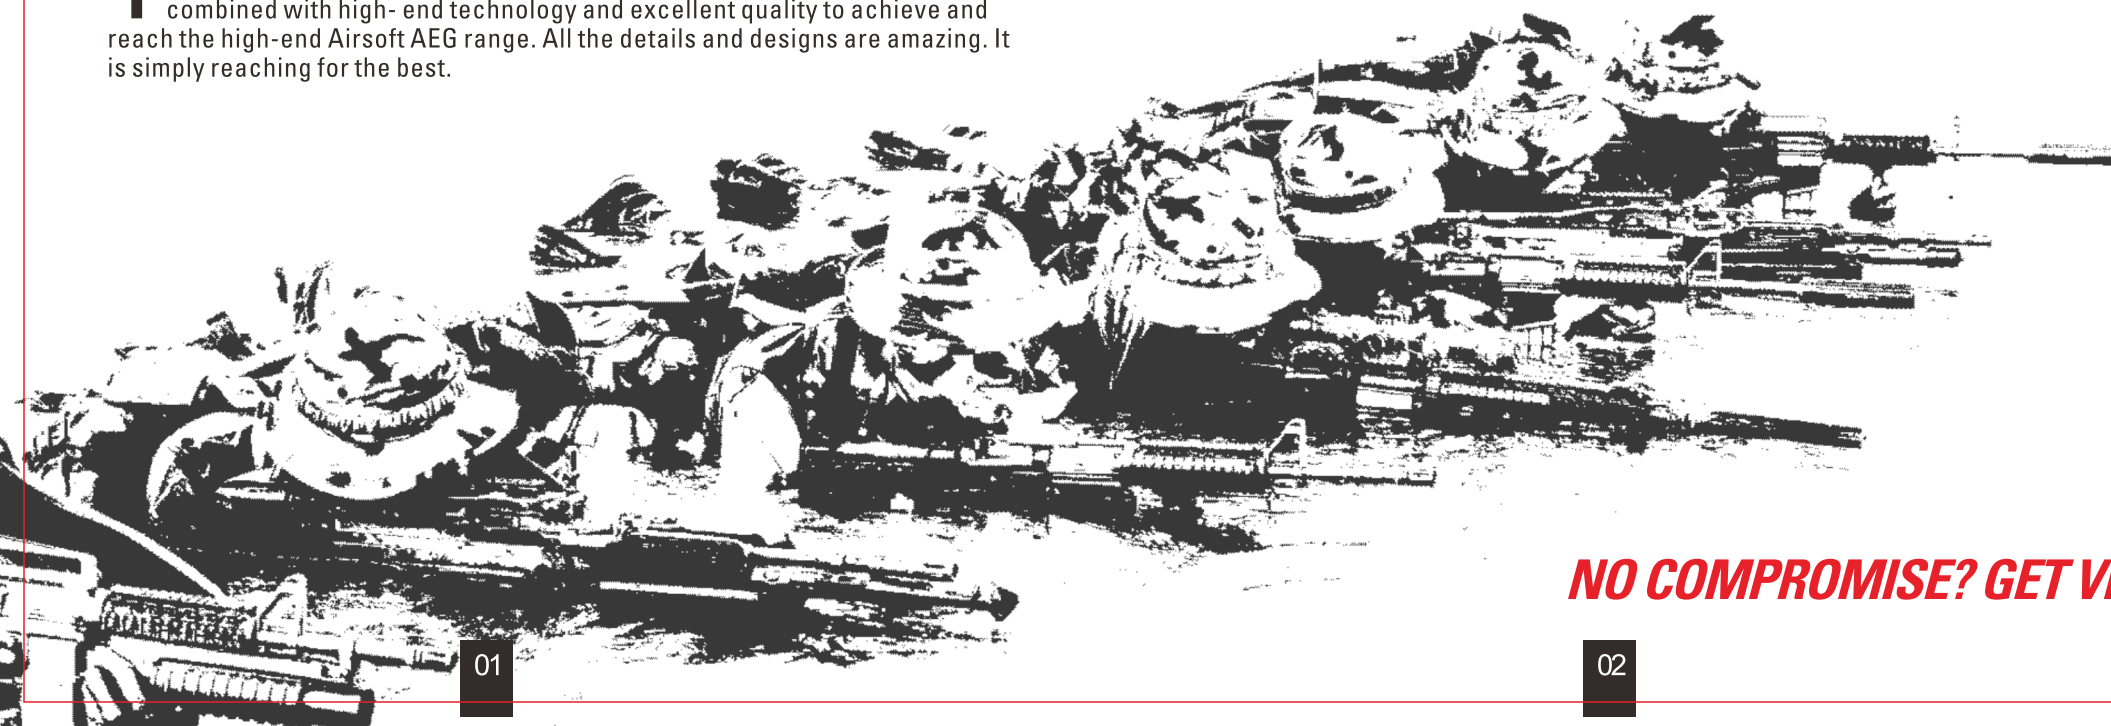


NO COMPROMISE? GET VFC!

COMPONENTS

 
RIGHT SIDE

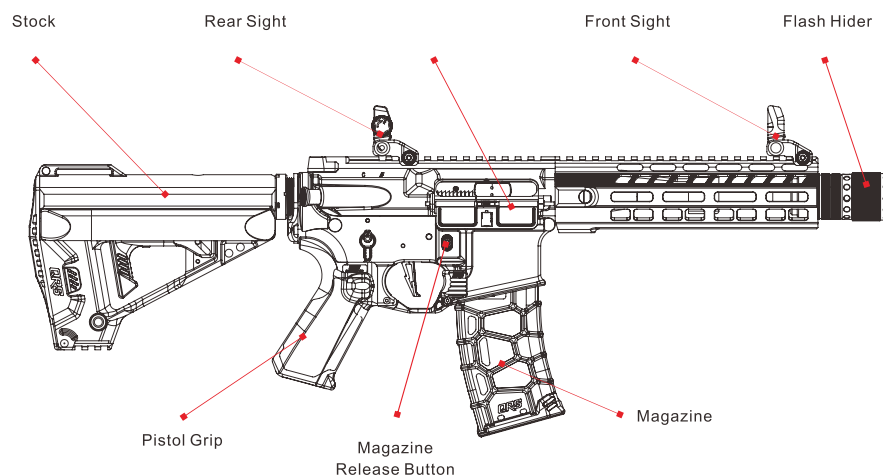

LEFT SIDE

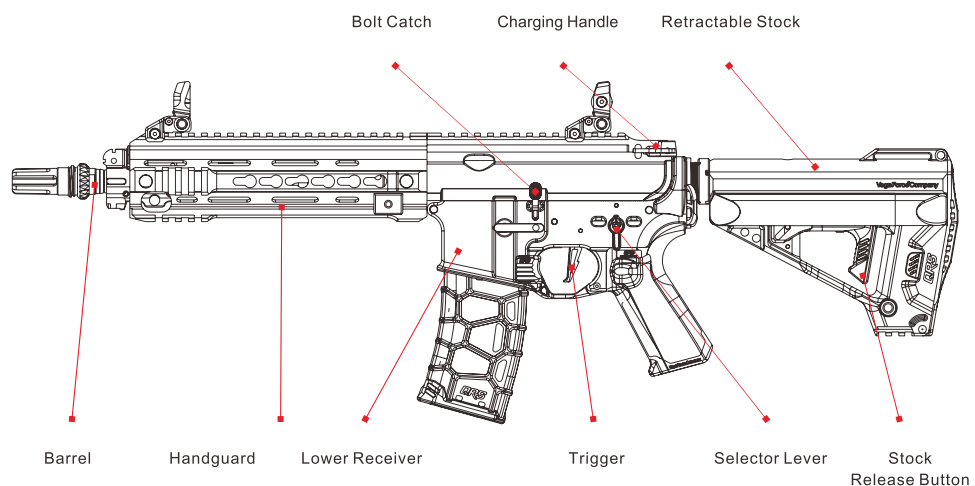 


SAFETY SETTING

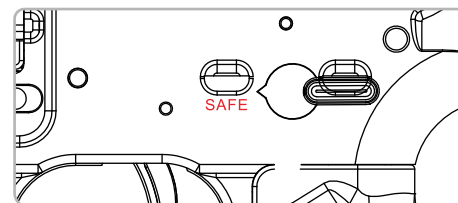 

Safety Setting

(The trigger can not be pulled)

 
Always set lever to SAFE position when gun is not in use.

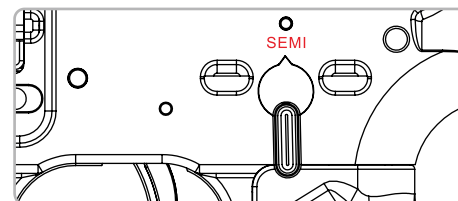

Semi Auto

(Single Shot)

 The gun will fire one shot each time the trigger is pulled.

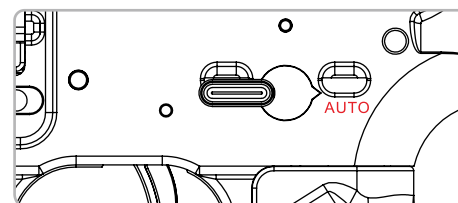

Full Auto

(Automatic Shot)

The gun will fire continuously while the trigger is depressed.

 
WARNING • CAUTION

- Do not operate the selector lever while the trigger is depressed. Damage and malfunction will occur if you attempt to do so.
- Do not pull the trigger while the selector is on SAFE. Doing so will damage the trigger and safety mechanisms.

INSTALLING BATTERY

WARNING • CAUTION

Before changing the battery, point the gun in a safe direction, remove the magazine, and set the selector to **SAFE**.

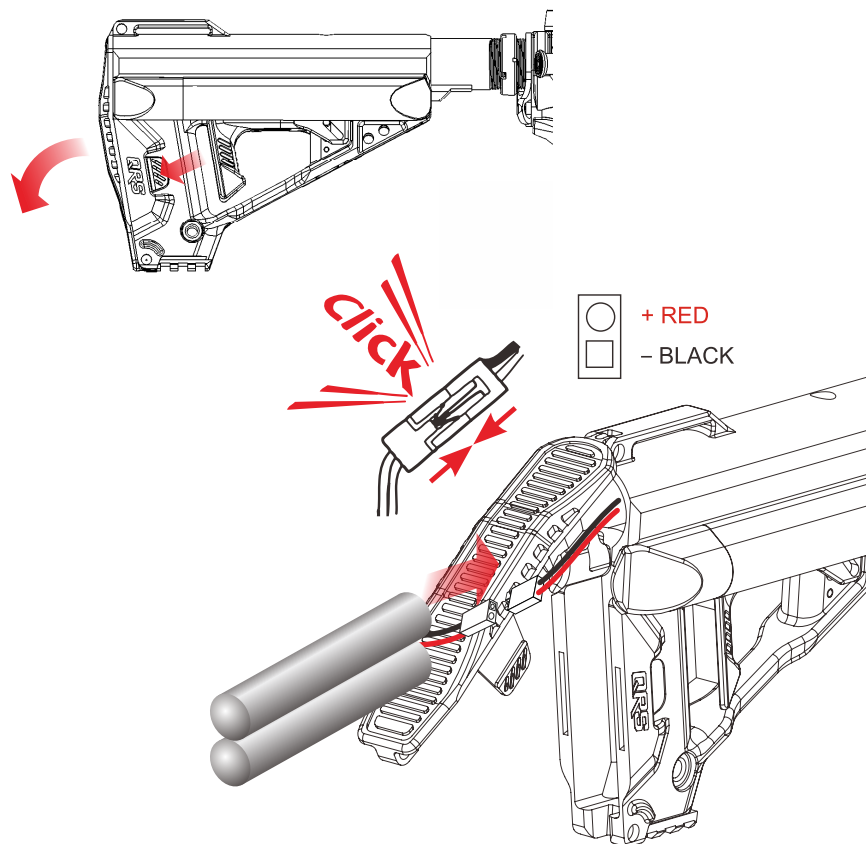


Open the battery cap, then plug in the battery.


CAUTION

When batteries have almost lost their charge they can cause gearbox malfunctions that require repair. Batteries should never be over-charged. This can damage the cell. Prolonged overcharging causes permanent damage to batteries. The battery should always be drained before charging. There is no warranty for batteries. Use only those batteries of min. 9.6 V 3000 mAh

 LOADING MAGAZINE

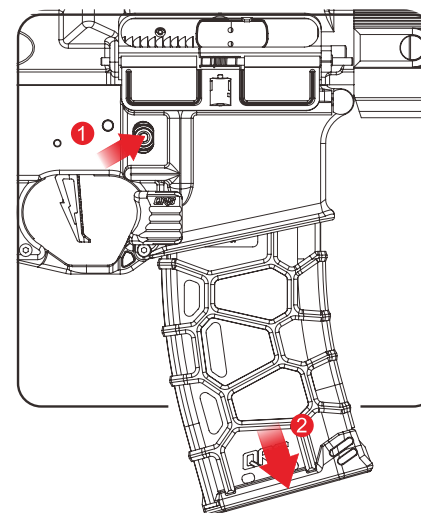

 
Press the magazine release button to remove the magazine.

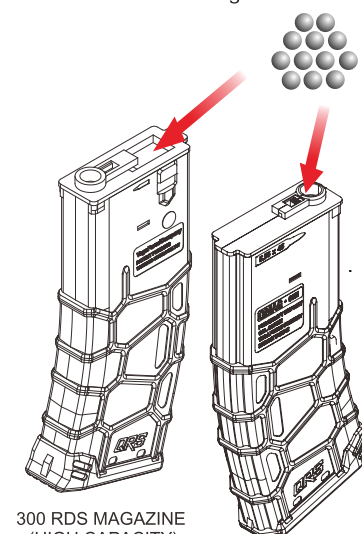

300 RDS MAGAZINE
(HIGH CAPACITY)

100 RDS MAGAZINE
(MID CAPACITY)

 Use only 6mm BB with the magazine.

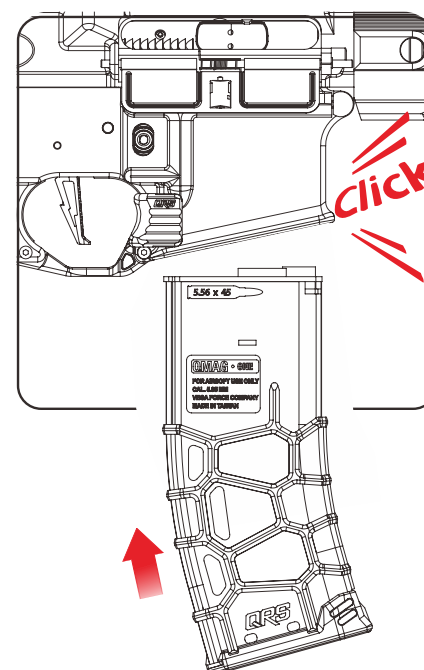

WARNING • CAUTION

- Always use high quality 0.20 gram or heavier BB in your airsoft rifle.

 
We will not be held responsible for any damage or incidents arising from use of poor quality or underweight BB.

Consult with your dealer for proper BB.


Make sure to set the magazine upwards and connect it firmly until a click sound is heard.

ADJUSTING SIGHTS


FOLDING SIGHT

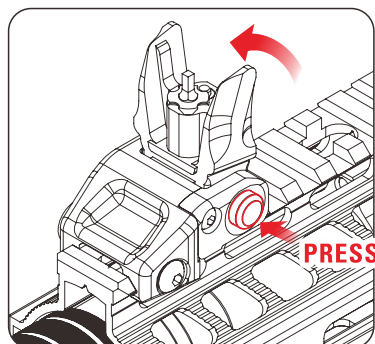

 
Press the button to flip up front sight.

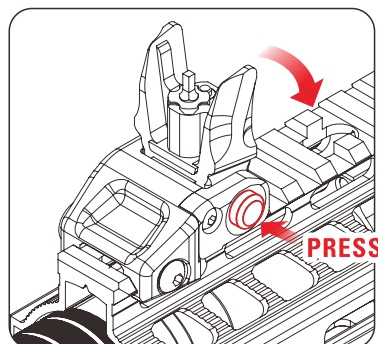

 Press the button to flip down front sight.

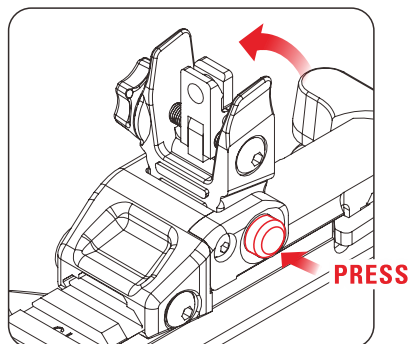


Press the button to flip up rear sight.

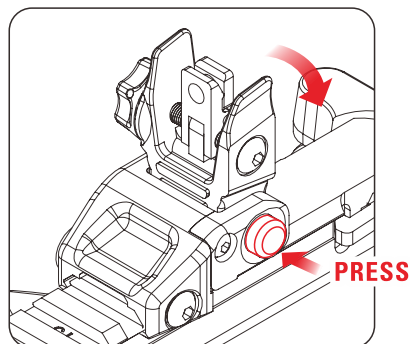 


Press the button to flip down rear sight.

 ADJUSTING FRONT SIGHT

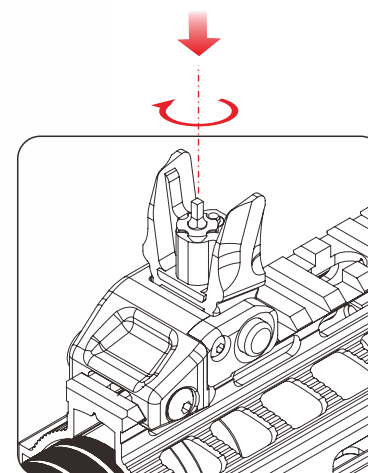

 
To adjust sight post downward,
turn clockwise

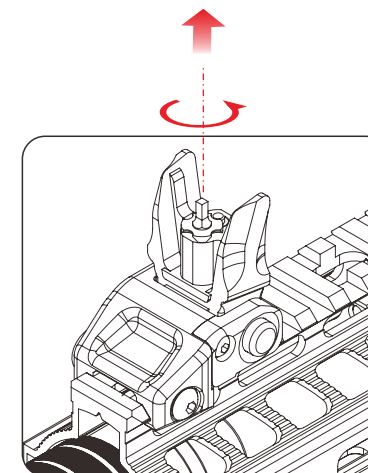


To adjust sight post upward,
turn counterclockwise

ADJUSTING WINDAGE KNOB

 Turn the windage knob for windage adjustment.

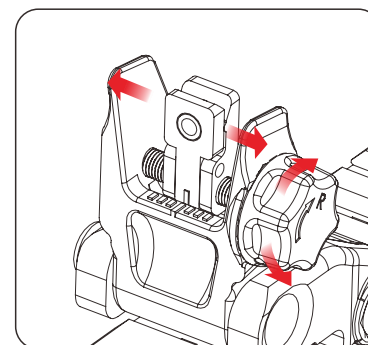


 Forward: Move the sight to the right.
Backward: Move the sight to the left.

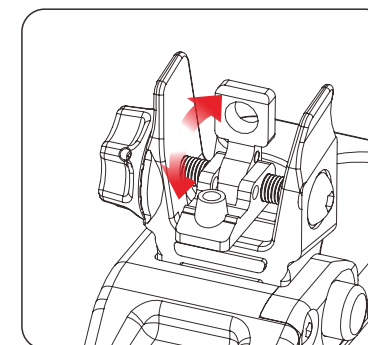


The sight can be flipped.

 ADJUSTING THE QRF STOCK

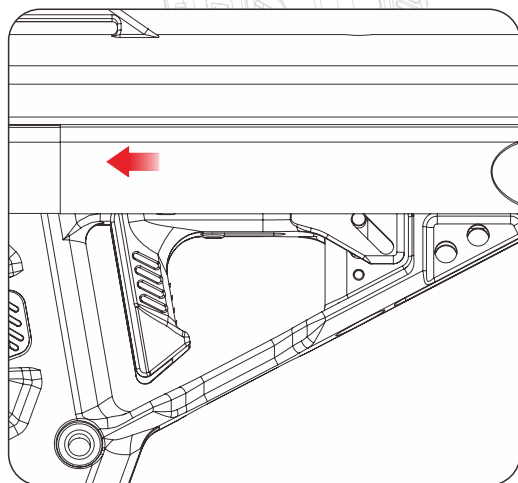

 Press the stock release button, then adjust the stock position.

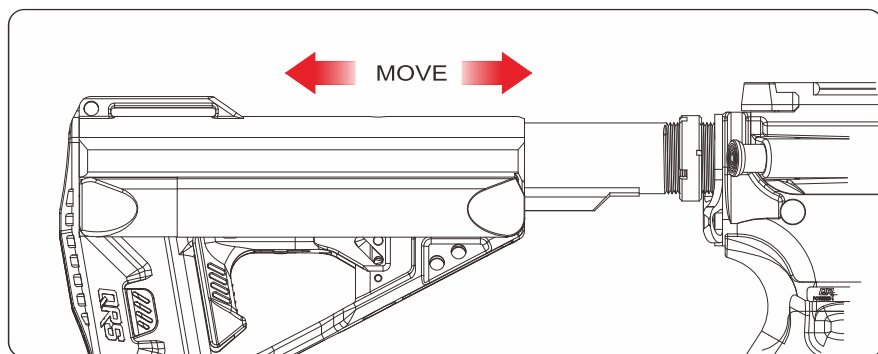


WARNING • CAUTION

- Be careful not to catch your fingers when operating buttstock functions.


CHARGING AND BOLT CATCH

 CHARGING AND OPEN DUMMY BOLT

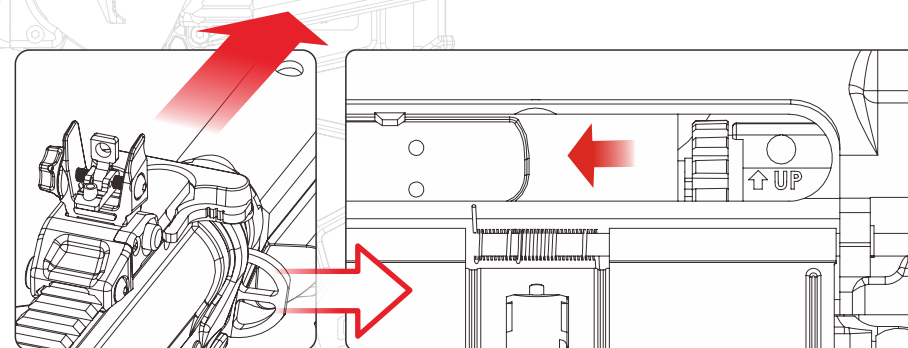

The charging handle can be pulled and the dummy bolt will be remain open.

 RELEASE DUMMY BOLT

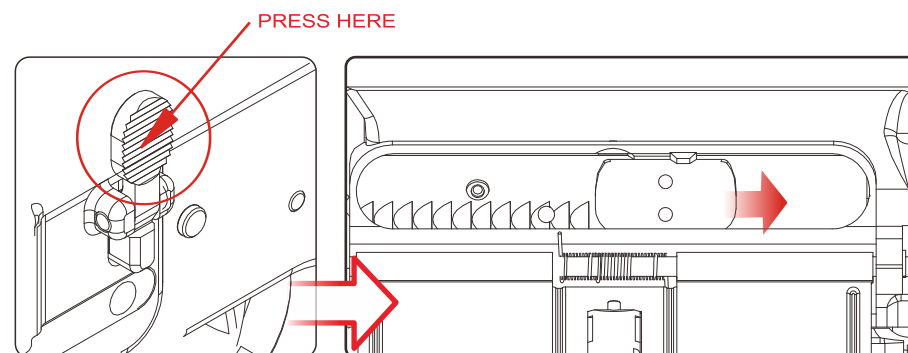


To Release bolt, just press the bolt catch.

Pinch Point Warning


Keep fingers out of bolt area when releasing bolt catch.

FIRING

 
Set the Selector lever to "SEMI" or "AUTO".

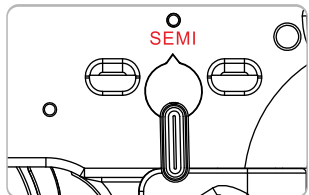

Semi Auto | The gun will fire one shot each time when the trigger is pulled.

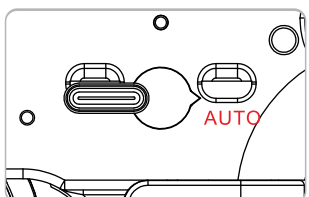 

Full Auto | The gun will fire automatically while the trigger remains pulled.

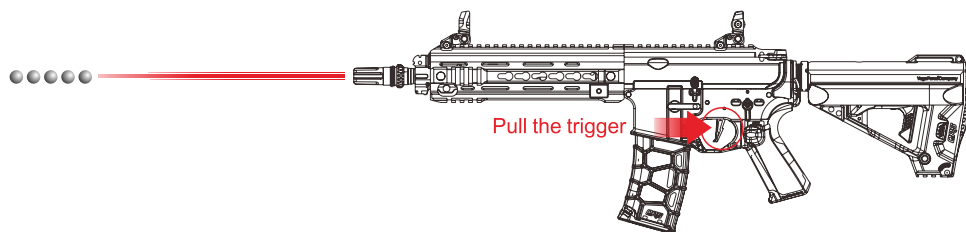 

1. Set the selector lever to Semi-Auto or Full Auto.
2. Pull the trigger.

CAUTION

- Never put your finger on the trigger unless you are ready to shoot.

WARNING CAUTION

- Confirm selector is off SAFE before firing the gun.
- Pulling the trigger while the selector is on SAFE will damage the gun and cause it to malfunction.

 
CAUTION:
EYE PROTECTION
REQUIRED
WEAR YOUR
SHOOTING GLASSES





VARIABLE HOP-UP SYSTEM

Pinch Point Warning

※ Be careful not to catch your fingers in the dummy bolt.

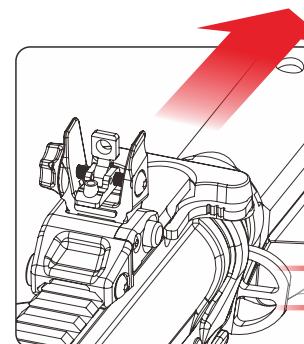

  Your VR16 rifle comes standard with a variable hop-up system. This hop-up system allows lift to be added to the bb's flight thus improving distance performance.

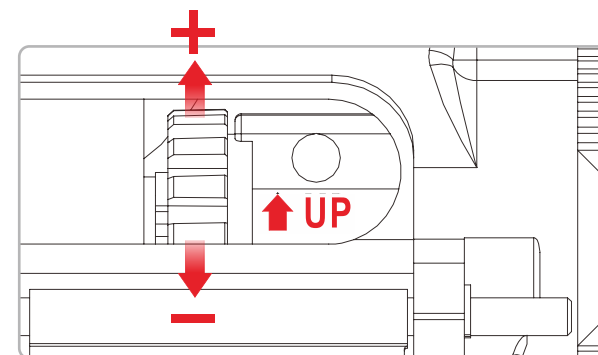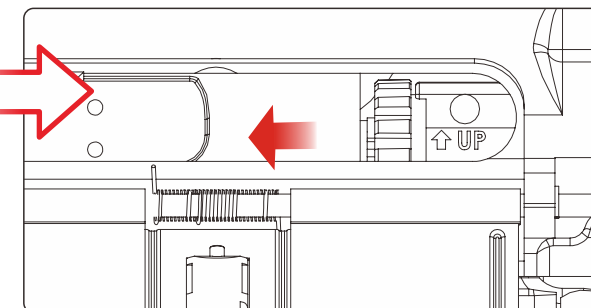

WARNING • CAUTION


- Too much hop up may cause BBs to jam. If a jam occurs, immediately dial back the hop up and test fire again. Otherwise, damage and malfunctions will occur with the gun.

- Open bolt to adjust the Hop-Up system.
- Gradually turn the adjustment dial in positive direction to increase hop up effect.
- Turning excessively adversely affects the trajectory. So, stop turning the dial when bullets fly horizontally.

MOD. VR16 INSTRUCTION MANUAL

Cal. 5.95mm Airsoft Electric Rifle

 - The best position is where the bullets fly horizontally and the longest flying distance is obtained.

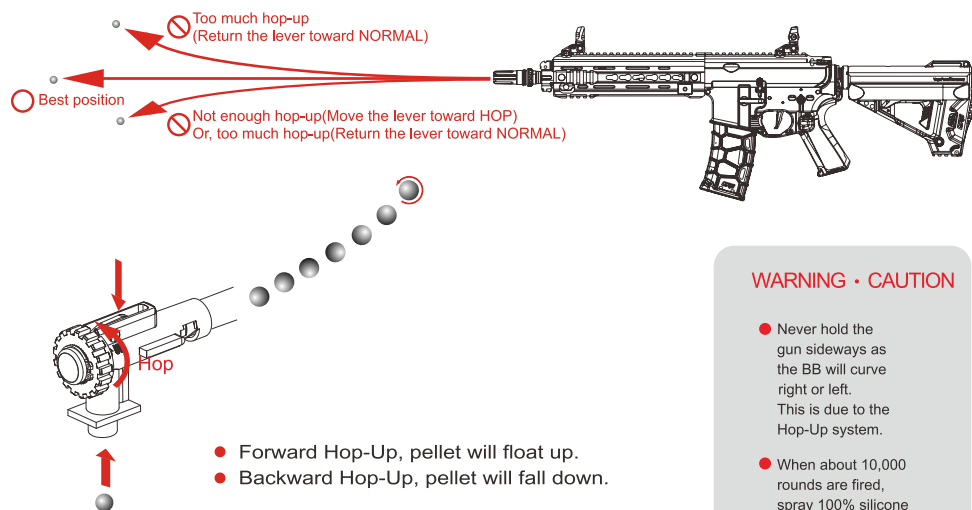

- Forward Hop-Up, pellet will float up.
- Backward Hop-Up, pellet will fall down.


Improper Hop-Up Setting Troubleshooting

Symptom	Cause	Action
BB's flying upward	Hop-up setting too high.	Gradually return adjustment lever towards normal.
Short flying distance of bb's (less hop-up effect)	Hop-up setting too high.	Gradually return adjustment lever towards normal.
	Hop-up system contaminated by oil or dirt.	Clean using the cleaning rod or consult your dealer or VFC for repair.
	Worn or damaged Hop-up system.	Purchase the replacement part at your dealer or from VFC and replace it.
Can not adjust	Damaged adjustment lever or other parts	Purchase the replacement part at your dealer or from VFC and replace it.
Frequent BB jamming	Hop-up setting too high.	After the adjustment lever is returned to anormal side, and the hop is released, it adjusts again.
	Improper or too large sized BB's	Only use quality Airsoft BB's
	Dirty Hop-up system	Clean using the cleaning rod or consult your dealer or VFC for repair

TROUBLESHOOTING CLINIC

Symptom	Cause	Action
No operation at all	Selector lever is set to safety.	Set the selector lever to fire.
	Battery is not charged.	Charge the battery.
	Battery connector is disconnected.	Connect the connector.
	The + and - of battery connector is reversed.	Connect the connector correctly.
	Fuse is blown out.	Replace the fuse.
Motor is cycling but gun does not fire	BB's are clogged inside the magazine.	Insert the charging cord into the magazine and move it up and down several times to remove jammed bb's
	BB's are clogged in the chamber.	Remove jammed bb's in chamber using a cleaning rod.
	Faulty gear.	Purchase the replacement gear from your dealer or VFC and repair.
Malfunction of full auto operation (automatic firing)	Insufficient battery power.	Charge the battery.
	Faulty bb feed of connection.	Repair clogging of the magazine.
Malfunction of semi-auto operation	Poor electrical connection.	Consult your dealer, VFC for maintenance or repair.
Malfunction of semi-auto operation (single shot)	Insufficient battery power.	Charge the battery.
	Poor electrical connection.	Consult your dealer, VFC for maintenance or repair.
Automatic firing cycles become slow	Insufficient battery power.	Charge the battery.
Shooting distance becomes shorter	Worn or damaged Hop-up system.	Consult your dealer, VFC for maintenance or repair. Replace the chamber packing, piston packing(O-ring)and piston assembly.
	Worn or damaged piston packing.(O-ring)	
	Deteriorated piston spring.	
	Faulty BB (too small or heavy)	Only use quality Airsoft BB's.
	Shortage of Silicone oil.	Drop a few drops of silicone oil from under the chamber.
Overly loud operating noise	Gear problems caused by excessive blank firing.	Consult your dealer, VFC for maintenance or repair. Replace the chamber packing, piston packing(O-ring)and piston assembly.
	Gear problems caused by excessive blank firing.	
	Worn of damaged gear.	
Bullets falling out from barrel end	Gear problems caused by excessive blank firing.	Only use quality Airsoft BB's.
	Worn of damaged chamber packing.	

 MAINTENANCE

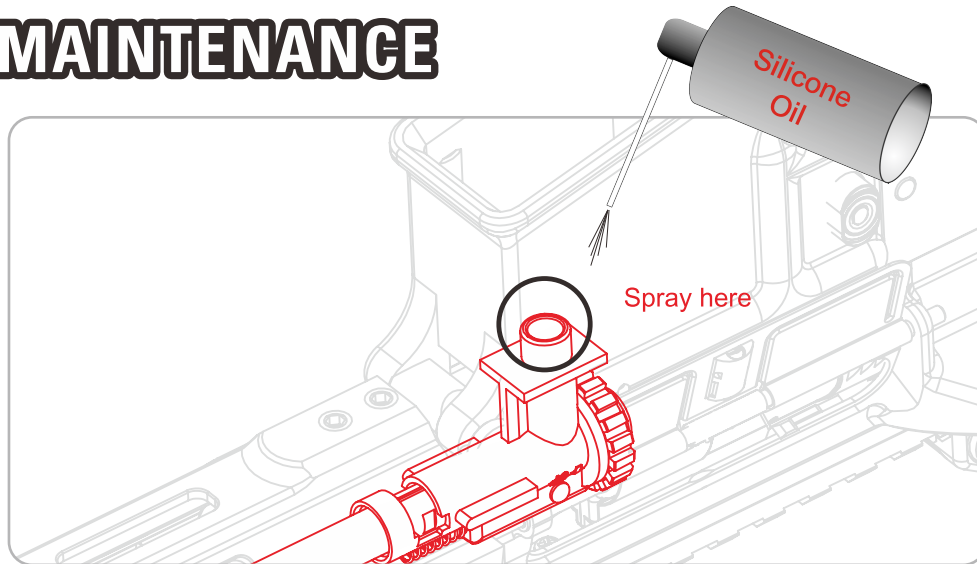

◎ After Operation

 
- Point the gun in a safe direction, remove the magazine and fire the gun in semi auto mode to clear the barrel and release the internal spring. Then set the selector to SAFE.
- Be aware a BB may still be in the barrel after the magazine is removed, or if the magazine is empty.

◎ Cautions on Motor and Battery

- If the rate of fire noticeably drops, recharge the battery or replace with a fully charged one.
- Allow adequate time (5-10 minutes) for motor and battery to cool after shooting 500 rounds continuously.


◎ When BB's Are Clogged

- If a bb jam occurs, remove the magazine and clear the jam using a cleaning rod.
- Apply a few drops of silicone oil the Hop-up service port. If you are unable to clear the jammed bb's, contact your nearest authorized dealer for service

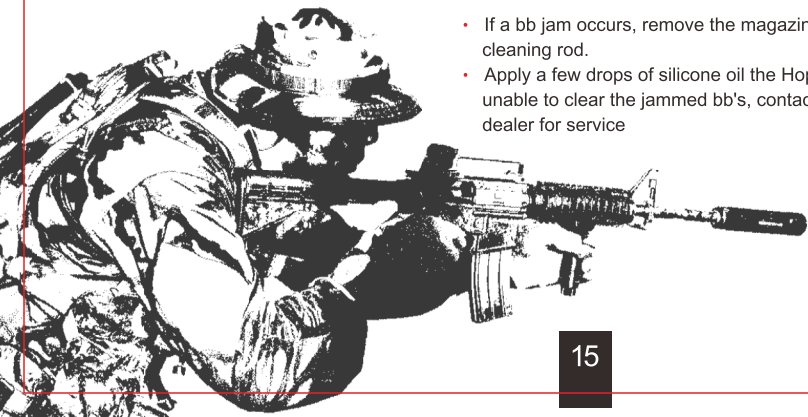

BARREL CLEANING

 Use patch holder to clean the inner barrel.

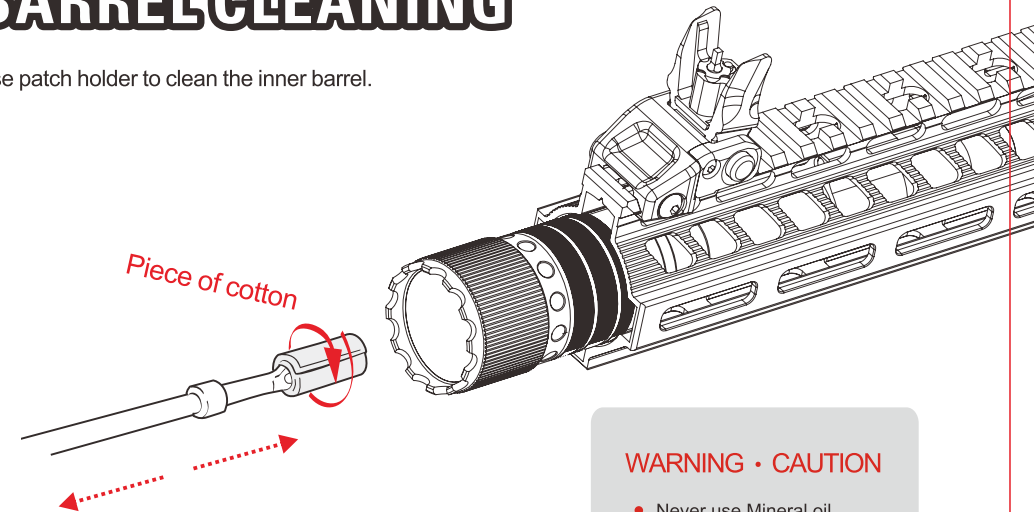


WARNING • CAUTION

- Never use Mineral oil based lubricants.
- Please read the warning on page 1 before shooting.

NOTE

VR16 SERIES FAMILY MAP

 TECHNICAL DATA

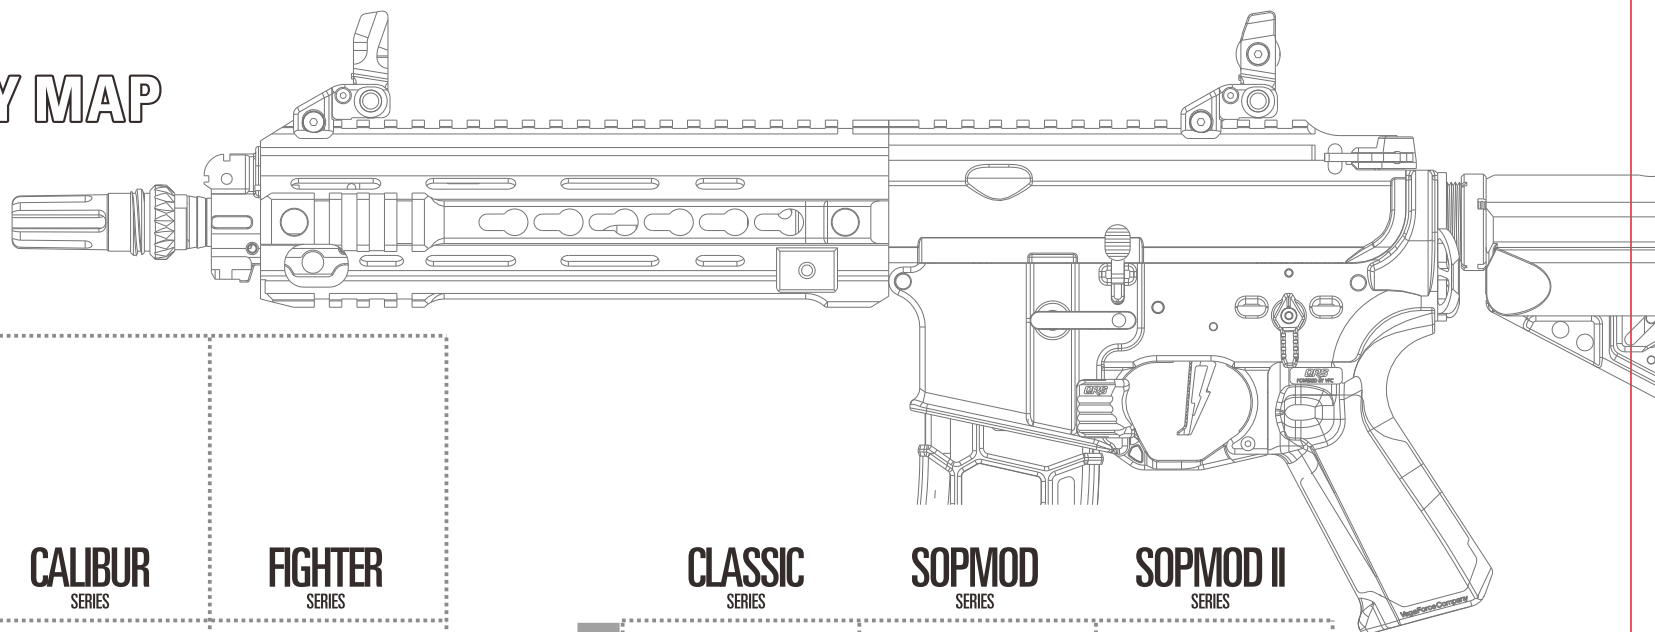

SONIC BOOM SERIES

PDW CLASS



VR16 STINGER SB

Over all:480/570 mm
Inner Barrel:168 mm
Weight:2275 g
Bullet:6 mm
Capacity:120 Rds
Muzzle Speed:100 m/sec

SABER SERIES

CQB CLASS



VR16 SABER CQB MOD1

Over all:690/770 mm
Inner Barrel:229 mm
Weight:2689 g
Bullet:6 mm
Capacity:120 Rds
Muzzle Speed:100 m/sec

CALIBUR SERIES



VR16 CALIBUR CQC

Over all:690/770 mm
Inner Barrel:229 mm
Weight:2689 g
Bullet:6 mm
Capacity:120 Rds
Muzzle Speed:100 m/sec

FIGHTER SERIES



VR16 FIGHTER CQB MK2

Over all:700/783 mm
Inner Barrel:275 mm
Weight:2700 g
Bullet:6 mm
Capacity:120 Rds
Muzzle Speed:100 m/sec

CARBINE CLASS



VR16 SABER CARBINE MOD1

Over all:810/890 mm
Inner Barrel:380 mm
Weight:2452 g
Bullet:6 mm
Capacity:120 Rds
Muzzle Speed:100 m/sec



VR16 CALIBUR CARBINE

Over all:810/890 mm
Inner Barrel:380 mm
Weight:2452 g
Bullet:6 mm
Capacity:120 Rds
Muzzle Speed:100 m/sec



VR16 FIGHTER CARBINE

Over all:822/903 mm
Inner Barrel:380 mm
Weight:2800 g
Bullet:6 mm
Capacity:120 Rds
Muzzle Speed:100 m/sec

CLASSIC SERIES

CQB CLASS



VR16 M105 CLASSIC

Over all:675/760 mm
Inner Barrel:275 mm
Weight:2800 g
Bullet:6 mm
Capacity:120 Rds
Muzzle Speed:100 m/sec

SOPMOD SERIES



VR16 CQBR SOPMOD

Over all:700/783 mm
Inner Barrel:275 mm
Weight:2700 g
Bullet:6 mm
Capacity:120 Rds
Muzzle Speed:100 m/sec

SOPMOD II SERIES



VR16 CQB II

Over all:696/777 mm
Inner Barrel:275 mm
Weight:2752 g
Bullet:6 mm
Capacity:120 Rds
Muzzle Speed:100 m/sec

SOPMOD II SERIES

CARBINE CLASS



VR16 M145 CLASSIC

Over all:785/870 mm
Inner Barrel:380 mm
Weight:2900 g
Bullet:6 mm
Capacity:120 Rds
Muzzle Speed:100 m/sec



VR16 RIS SOPMOD

Over all:816/898 mm
Inner Barrel:380 mm
Weight:2800 g
Bullet:6 mm
Capacity:120 Rds
Muzzle Speed:100 m/sec



VR16 RISII

Over all:810/900 mm
Inner Barrel:380 mm
Weight:3000 g
Bullet:6 mm
Capacity:120 Rds
Muzzle Speed:100 m/sec



VR16 FSP

Over all:810/900 mm
Inner Barrel:380 mm
Weight:3000 g
Bullet:6 mm
Capacity:120 Rds
Muzzle Speed:100 m/sec

RIFLE CLASS



VR16 M200 CLASSIC

Over all:1000 mm
Inner Barrel:509 mm
Weight:3020 g
Bullet:6 mm
Capacity:120 Rds
Muzzle Speed:100 m/sec



VR16 SPR SOPMOD

Over all:908/990 mm
Inner Barrel:475 mm
Weight:2800 g
Bullet:6 mm
Capacity:120 Rds
Muzzle Speed:100 m/sec

Notice:

1. In different countries have their own specific restrictions of muzzle velocity. Please follow the muzzle velocity restrictions of local laws.
2. The specification of products may differ in future. Please check newest specifications on VFC official website.
3. You can download the PARTS LIST of products on VFC official website.

VFC official Website <http://www.gb-tech.com.tw>



VegaForce Company
service@vegaforce.com.tw



www.gb-tech.com.tw



Facebook/Vegaforcecompany